

POD/TURNSTILE FREE SPIN

How to put an MSite Pod/Turnstile into Free Spin

If a situation arises where you need to bypass the **MSite Face** scanner for access through one of our **Pods** or **Turnstiles**, there is a protocol to put the turnstile into “**Free Spin**”. This unlocks the turnstile, allowing free flow access both in and out of site.

Activate Free Spin

To activate **Free Spin**, you will need the keys supplied with the **Pod/Turnstile**.



Where to find the keys

If you have a **Turnstile** or a legacy **Pod**, the keys will have been handed over as part of the delivery/installment process.

If you have an updated **MSite Pod**, the keys will be stored in built-in **Lock Box**.



Lock Box: Closed



Lock Box: Keypad



Keys Location



Lock Box: Open

POD/TURNSTILE FREE SPIN

How to put an MSite Pod/Turnstile into Free Spin

Lock Box Location

The **Lock Box** is located within the **MSite Pod** at the top of the black panel to the side of the turnstile, as shown in the image.



Unlock Turnstile

To activate **Free Spin**, you need to use the supplied keys to unlock the **turnstile**.

The location of the keyhole is at the top of the **turnstile**, as shown in the image.



+44 (0) 333 456 2001